
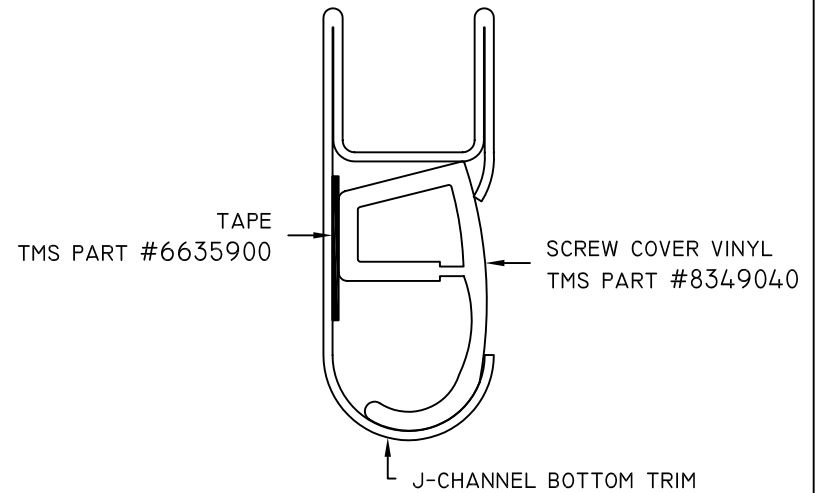


PRINT TMS-006

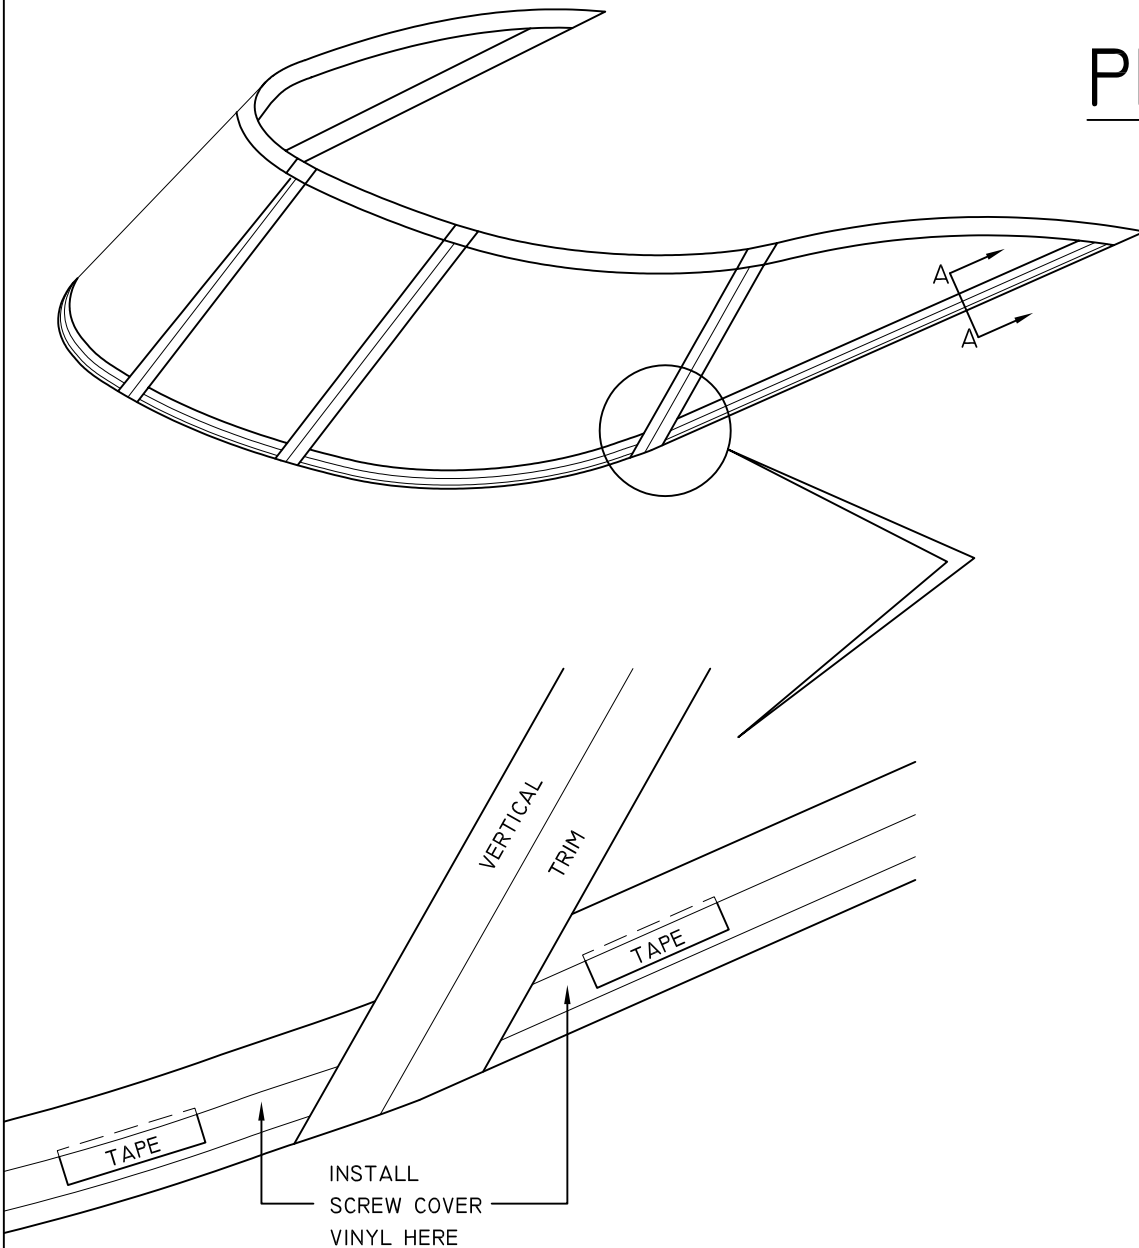

SECTION "AA"
FULL SCALE

SCREW COVER VINYL INSTALLATION PROCEDURE FOR HEAVY S.S WINDSHIELDS

1. PEEL BACKING OFF TAPE (ALREADY MOUNTED).
2. CUT SCREW COVER VINYL STARTING END TO MATCH ANGLE OF VERTICAL TRIM.
3. PLACE CUT END OF VINYL IN OPEN J-CHANNEL AND APPLY PRESSURE UNTIL VINYL SNAPS IN PLACE.
4. DO NOT STRETCH VINYL.



Taylor Made
SYSTEMS
New York, Inc.

PHONE (518) 773-0636
FAX (518) 725-2420

BOAT:		
DESCRIPTION: PRINT TMS-006		
BY: DJS	DATE: 05/08/03	CODE: