


REV	DESCRIPTION:	DATE:	BY:
-			
-			

## RETAINER CLIP & RETAINER SCREW INSTALLATION

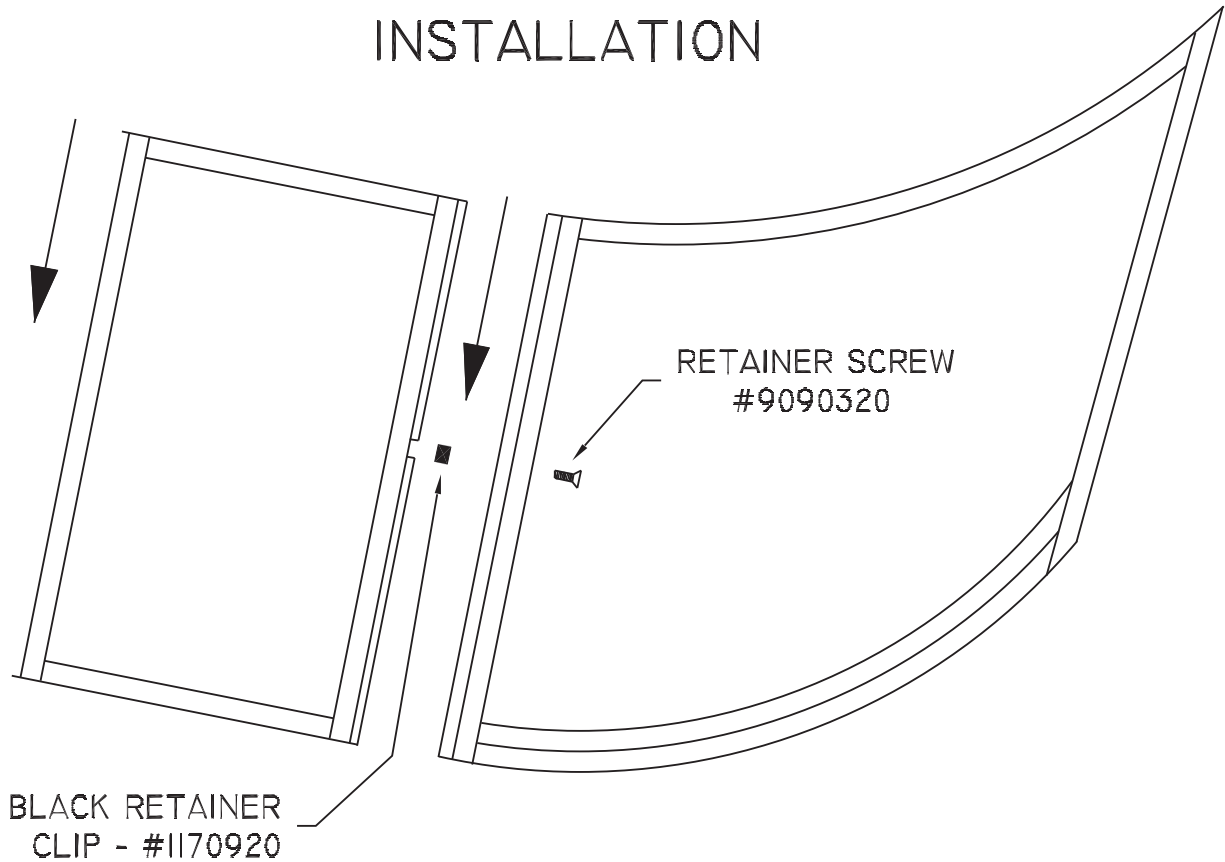

### WALK THRU DOOR INSTALLATION SHEET

TO ASSEMBLE DOOR ONTO THE PORT FRONT PANEL:

1. START BY UNSCREWING THE SCREW AND THE BLACK RETAINER OUT OF THE PORT FRONT INBOARD BAR.
2. INSERT THE BLACK RETAINER INTO THE PRE-FABRICATED SLOT ON THE DOOR'S HINGE PIECE. (RETAINER CAN ONLY FIT ONE WAY)
3. HOLD THE RETAINER AND DOOR PANEL, SLIDE THE DOOR INTO THE PORT FRONT PANEL. REALIGN THE PRE-DRILLED HOLE IN THE RETAINER WITH THE PRE-DRILLED COUNTER SUNK HOLE IN THE PORT INBOARD BAR.

(NOTE: WHEN SLIDING DOOR INTO PORT FRONT, BE CAREFUL NOT TO TEAR PREAPPLIED HINGE PROTECTING TAPE.

4. INSTALL SCREW AND TIGHTEN.

TAYLOR MADE SYSTEMS NEW YORK	
BOAT: SPORT BOATS	
DESC: RETAINER CLIP INSTALLATION	
DATE: 06/25/99	CODE: -
ENG: EGH	DET: EGH 06/25/99